



You can be sure...
if it's Westinghouse



WESTINGHOUSE™, ® and "YOU CAN BE SURE. IF IT'S WESTINGHOUSE™" are trademarks of WESTINGHOUSE ELECTRIC CORPORATION and used under license to W-Lifestyle Limited.

WKTb800 • 05/2011




Westinghouse



Blender

Instructions

For household use only

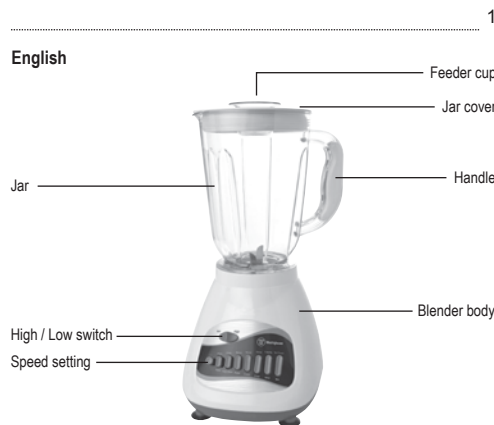

INSTRUCTIONS

Read the instructions and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it till you know the appliance works.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

1. Read all instructions.
2. To protect against risk of electrical shock, do not immerse blender body, cord, or plug in water or other liquids.
3. This appliance should be used only by or under the supervision of a responsible adult. Do not leave the appliance unattended, especially when children are present.
4. Unplug from outlet when not in use, before cleaning and before attaching and detaching accessories.
5. Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
6. Do not place the appliance near a hot gas or electric burner, or in a heated oven.
7. Do not attach or remove accessories or other attachments while the appliance is in use.
8. Before using this appliance, make sure that accessories are firmly attached to the blender body.
9. Do not use accessories or attachments other than those we supply.
10. Do not use outdoors or while standing in a damp area.
11. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
12. Blades are sharp, handle with care.
13. The blade of this appliance is very sharp, please handle it carefully when cleaning and assembling.
14. Do not use the appliance for any purpose other than those described in these instructions.


BEFORE USING FOR THE FIRST TIME

1. The machine should be laid on flat platform when it is working and operated according to the user manual.
2. There is a safety protective switch in this appliance. Only when it is correctly assembled can it work.
3. It is suggested that this appliance should not work continuously for one minute. If needed, wait until the housing's temperature is no higher than your hand's.
4. Do not open the blender cover when this appliance is working. Do not put your hand or other objects into the jar before you unplug this appliance.
5. There is a protective device against super-high temperature,

- when the temperature is too high, the power will shut down automatically, and run again automatically when the motor is cool. (It takes about 15 mins).
6. If the power cord was damaged, for your safety, please call for a maintainer from the manufacturer's or other professionals to replace it.
7. Please put the blender in dry and ventilative place if it is not used for a long time.

USING THE BLENDER

1. Put the blender jar on the body, making sure the rubber gear fix rightly to the motor gear on the body and put on the jar cover.
2. Make sure the switch is off and check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
3. When blending, cut the materials into cube blocks of about 15 mm and put them into the mug, add proper amount of water and cover the jar. Note that the water amount should not exceed the maximum capacity of the jar. Press the Pulse button several times for pre-blending and turn to other buttons according to respective needs.
4. Choose the right button according to the amount and nature of the materials being blended. Press the less powerful button for small amount and soft materials and more powerful button for large amount and hard materials. You may shift the High/Low switch to achieve higher or lower speed.
5. If you want to see the blending effect or add fruits or vegetables, just open the transparent feeding cup.
6. When finish, switch off and pull out the power plug. Take out the blender jar vertically and pour the juice into the container.
7. When using, do not open the jar cover to add water or other liquid. It is better to fill in materials of 1/3 - 2/3 amount of the jar's capacity.

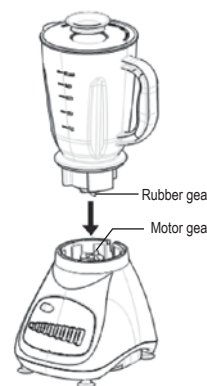

CARE AND MAINTENANCE

Caution: Never immerse the blender body in water or any other liquid.

1. Put into the jar proper amount of warm water and a little food detergent, cover the jar and press the pulse button for about 10 seconds; or soak the jar into the water to wash with a brush.
2. Wipe the main body with a piece of wet cloth. Do not wash it in water to prevent damage.
3. Store the appliance in its original box in a cool and dry place.

INFORMATION AND SERVICE

If you have question or concerns about your product, please visit our website: www.westinghouse-lifestyle.com, or contact our oversea offices/agents.

In line with our policy of continuous product development, we reserve the right to change product, packaging and documentation specifications without notice.